

**Continue**

























## Bosch maxx 5 1200 washing machine manual

User Guide for Your Washer Dryer: A Step-by-Step Guide to Safe and Efficient Use \*\*Table of Contents\*\* 1. Protecting the Environment 2. General Safety Instructions 3. Introducing Your Washer Dryer 4. Preparing and Using Your Washer Dryer for the First Time 5. Loading, Detergents, and Cleaning Products 6. Operating Modes and Functions 7. Troubleshooting Minor Issues 8. Maintenance and Installation Instructions \*\*Protecting the Environment\*\* Dispose of packaging materials in an environmentally responsible manner to reduce waste. Your washer dryer is designed to be energy-efficient and reduce household costs. \*\*General Safety Instructions\*\* Use your washer dryer only for household purposes, with cold drinking water, and commercially available detergents. Keep children away from the appliance when in use. \*\*Introducing Your Washer Dryer\*\* Familiarize yourself with the control panel, display panel, and dispensers (I and II) for adding detergent or cleaning products. \*\*Preparation and First-Time Use\*\* Read these instructions carefully before using your washer dryer for the first time. Consult page 52 for consumption values of your appliance. Programme completion without spin cycle or PAUS pause: door can be opened at F:16\* fault display, page 48. Rinse cycle only runs if selected, otherwise door remains locked (page 11). Excessive detergent usage may lead to excessive froth formation and subpar washing results: an automatic rinse cycle is triggered. The colon symbol disappears when the appliance switches off or program changes (page 12). Increased drying times occur due to factors like additional rinses for excessive foam, poorly distributed laundry, low water pressure, or selected options. Before first use, ensure washer dryer installation and connection are proper (page 54), as it was pre-tested at factory. Remove any residual testing water by running an empty cycle. Preparing the laundry: remove loose debris, empty pockets, brush out sand, and separate easy-care items for air drying to prevent creasing. For normally soiled clothes, select program according to stain type (pages 16-17): T-shirts, underwear, tea towels, bed linen can be washed without pretreatment. Remove stains promptly; first dab with soap solution, then wash. Stubborn stains may require multiple washes. Only sort and dry laundry with corresponding care symbols: E for normal heat, D for low heat (page 18). Textiles marked F or containing wool should not be tumble dried (page 19). Loading the laundry: avoid items pretreated with solvent-based agents as they pose explosion risk; rinse thoroughly before loading. Foreign objects in the drum can damage clothes and the appliance itself. When dosing detergent, ensure to follow proper usage guidelines to prevent poisoning risks. Given article text here out of the reach of children. Dose detergent according to q the water hardness. You can find out the water hardness from your water utility company. q the amount of laundry. Dispenser I Adding detergent/ Detergent for prewash or starch. cleaning product Dispenser II Detergent for main wash, water softener, pre soaking agent, bleach and stain removal product. Dispenser 2 Cleaning product, e.g. fabric softener or fabric conditioner (do not fill above the lower edge of the insert I). Programmes and functions Select the desired programme. Programme i Programmes wash lightly soiled textiles in the selector shortest possible time. For heavily soiled textiles reduce the load or touch the Intensive button! Cottons y cold-90 °C. Cottons Eco cold-60 Washing °C. Sensitive – cold-60 °C programmes Hard-wearing textiles, heat-resistant textiles made of... Page 23 Reduced spin speed. Easy Care A cold-60 °C Easy care textiles, e.g. made of cotton, linen, synthetic or blended fabrics. Reduced spin speed. cold-40 °C Dark Wash Dark easy care textiles. Reduced spin speed. cold-40 °C Sports, Fitness Textiles for outdoor wear. Reduced spin speed. Page 24 Easy Care (drip dry) laundry, such as synthetics and fabric blends, as well as cotton with drip dry finish, e.g. viscose rayon, modern acrylic and polyester. Maximum load 1.5 kg. You can select automatic drying or time controlled drying by touching the Dry Y button. Automatic drying During drying, the temperature sensor determines the residual moisture. Page 25 Time controlled drying The drying duration is the drying time you have set. Set the drying time using the Dry Y button. i Time controlled drying-15 minutes is the cooling down programme. If a drying process is interrupted, please select this programme to cool the laundry before opening the loading door. Page 26 Programme options Rinse K Rinse cycle with subsequent spin cycle for rinsing hand washed items or for starching. Touch the Extra Rinse K button for desired additional rinse cycle(s). Reduced spin speed. Spin B Spin cycle after a programme with setting "...“ (without final spin) or for spinning hand washed washing with selection of the required speed. Page 27 Additional options buttons Intensive The washing time is extended so that highly soiled washing or 5.0 kg of cottons/coloureds are washed more intensively. Touch the button in addition to the programme for the following combinations of load and degree of soiling: Amount of Programme and Degree of... Washing/drying with standard settings Your washer dryer can be used in three ways: - washing only, - drying only, - washing and drying without a break in between. i For uninterrupted washing and drying, the maximum load must be reduced to 2.5 kg for cottons/ coloureds or 1.5 kg for easy care. Page 29 - drying duration (displays 00:00, i.e. 0 min, if the laundry needs to be dried, please refer to setting the drying time\*), programme duration. q If required, touch the button(s) for additional option(s). The programme duration, additional rinse cycles and other parameters showed in display will be changed accordingly. Page 30 i The almost empty progress bar is indicated in the display field. While the programme is running, the You can adjust washing/drying settings to your needs by changing temperature, spin speed and finish time. Change the default washing temperature by clicking on the temperature button until desired temp displays. Different clothing requires different programmes with respective temperature ranges. You can also change the default spin speed by touching the B Spin button until desired spin speed shows up. Before a programme starts, you can specify how many hours later it will be finished by touching the W Finish in button. If you select childproof lock, no changes can be made while the programme is running and certain functions may get inadvertently changed. If required, activate childproof lock at start of programme or touch Start/Pause button directly. Deactivate lock when end of programme reached. Load laundry of matching colour. Soak and add dye according to manufacturer's instructions. Only use environmentally compatible dyes. Follow instructions for dyeing application. Pour detergent into dispenser II after dyeing. Empty ½ measuring beaker into dispenser II. Clean housing with hot soapy water or mild cleaning agent. Avoid using solvents or water jets, risk of explosion. Accumulated detergents and additives? Pull out detergent drawer, clean under running water, and dry. Pump blocked by debris or fluff? Drain water (up to 20 litres) into suitable container, allow hot water to cool down before use. Descaling agents contain acids that may damage washer dryer. Avoid descaling if using correct amount of detergent, follow manufacturer's instructions. Minor problems? Call customer service at page 53 for help with repairs. Some phosphate free detergents contain water insoluble residue which may appear as light stains on brush out after washing. Soiling caused by ointment, grease requires maximum detergent dosage and consumption values are normal for a programme. A customer service technician will charge you if the appliance is still under guarantee even if they give advice on how to resolve the fault yourself. Installing or transporting your washer dryer can be risky and requires safety instructions. Some useful tools include a box wrench and spirit level to ensure proper alignment. The washer dryer must be installed or built under/built into an installation work surface that allows for a recess width of 60 cm. Connection hoses are available in different lengths, including extended supply hoses from specialist dealers. To prevent electric shock, it is essential to follow instructions when connecting the washer dryer with cold drinking water only and without using mixer taps. Water drainage hoses should not be bent or pulled, but must fit within a maximum height difference of 100 cm. A securely connected hose clip is required for siphon drainage into wash basins. Always connect the washer dryer only to an alternating power current via a correctly installed earthed socket, following connection specifications and recommended fuses as stated on the appliance's nameplate. Before moving the washer dryer, follow these steps: Turn off the water supply and reduce pressure in the water inlet hose. Drain any remaining washing solution from the tank. Disconnect the washer dryer from the mains and dismantle the supply and drainage hoses.

Bosch maxx 6 как пользоваться. Bosch maxx 4 отжим. Bosch maxx classic washing machine troubleshooting. Bosch classixx 5 инструкция режимы. Bosch maxx 5 разборка. Bosch maxx 5 washing machine troubleshooting. Bosch maxx 6 washing machine instructions. Bosch maxx 5 speed edition. Bosch maxx 6 washing machine settings.